



### Operation

There are two thermistors housed in the fuel sender unit which is located in the fuel tank. The thermistors are positioned at two different levels corresponding to 7 and 4 litres. When the thermistor is exposed to the air in the tank the appropriate light is illuminated.

Each thermistor is supplied with 12 volts that is current limited to 95mA, this current limit is controlled by the BD240A's and there accompanying circuitry. With the applied voltage the thermistors self heat, when they are immersed in fuel the heat is dissipated and the resistance is approximately 600 ohms. While the thermistor is immersed in fuel the inverting input of the op-amp has 12 volts applied to it. This voltage level is above the 4.7 volt reference applied to the non-inverting input of the op-amp and thus the output of the op-amp is below the 0.7 volts needed to turn on the NPN transistor (BD877) which controls the lamp. When the thermistor is above the fuel level and in air, the self heating causes its resistance to drop below 53 ohms, the voltage at the inverting input of the op-amp drops with it to below the 4.7 volt reference level applied to the non-inverting input of the op-amp. This causes the output of the op-amp to swing to its maximum positive level (+12V) and switch on the

Title		
Size	Number	Revision
A4		
Date: 13/11/2006	Sheet of	
File: E:\DXP\..\FuelLightUnit.SCHDOC		Drawn By: